OXFORD COLLECTION The Oxford Collection of click lock laminate

fooring features tried and true co ptions with the look and texture of real hardwood plank





INSTALLATION MANUAL



Miter saw with sharp





Spacer Kit



sharp blade



Cutting knife























It is the responsible of the installer to do the Final inspection of all the product before beginning the installation. The laminate should be inspected of color, finish, sheen, and shipping damages. Should

INSTALLER

any defects be present contact you dealer immediately. Once the laminate has been installed it is considered accepted.

SUBFLOORS

ACCLIMATION

GIT laminate is required to acclimate prior to installation. To

acclimate store boxes, flat and level in the area to be covered.


PREPARATION

Decide the direction of the GIT laminate planks. A recommendation would be to install parallel to the longest wall. Use a suitable compound to fill fix sub floor cracks Never glue GIT laminate planks

Remove threshold baseboards and existing flooring if required.

THE INSTALLATION

GIT laminate cannot be installed over existing flooring or carpet. Ensure that the sub flooring is clean, dry, level and structurally sound. Variations in floor should not exceed +- 2mm in 2m. GIT laminate flooring requires an underlay. It is underlay is required to insulate and act as a moisture barrier. Follow instruction on the underlay.

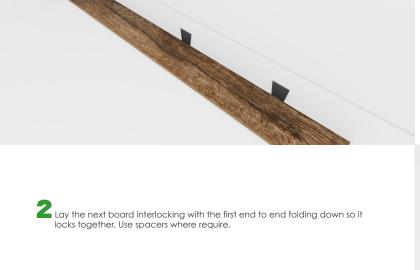



Place laminate plank so that the tongue is facing the wall 6mm or ¼ inch from the wall. Use spacers between the wall and the plank.



The last board in the row should be 6mm 1/4 inch from the wall to allow for

expansion and at least 16cm or 7 inches in length.

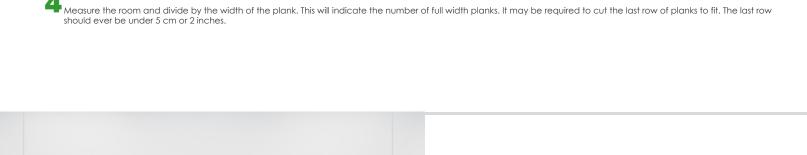


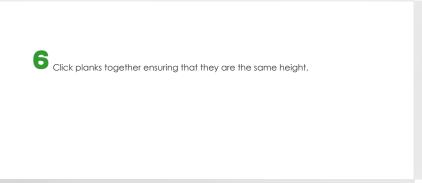


After the first three rows are installed use a chalk line to check that the rows

are straight.

Use the end of the first row to start the second row provided it 30cm or 12 inches. If not cut a new plank to start the row ensuring that joints are 18cm

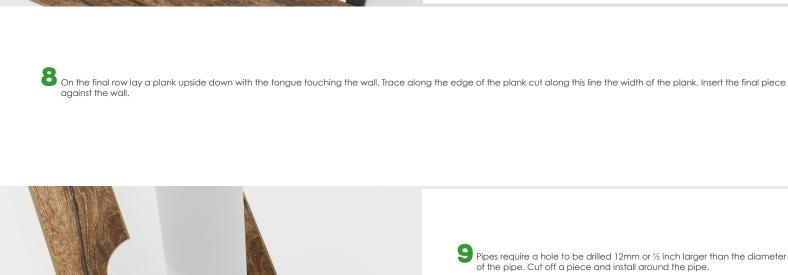


Pipes require a hole to be drilled 12mm or ½ inch larger than the diameter of the pipe. Cut off a piece and install around the pipe.

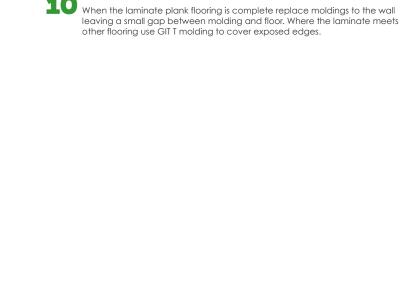

MAINTENANCE

Clean all spills as soon as they happen.

Clean with a laminated Floor cleaner. Apply cleaner to a clean pad never directly on the Floor. Use felt protectors under furniture and other product that are moved across the floor on a regular basis. Office chairs require chair matts.

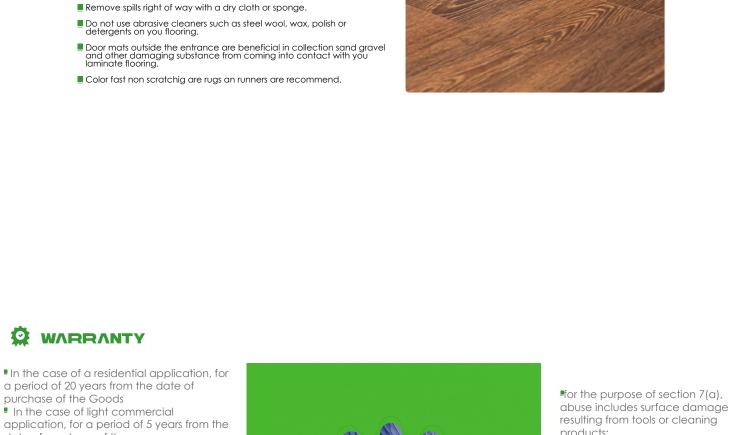

PRODUCT WARRANTY LIMITATIONS: The Product Warranty does not apply to any Good that:

date of purchase of the

neglect, negligence, accident, improper testing, improper installation, improper storage, improper handling, abnormal physical stress, abnormal environmental conditions or maintenance or use contrary to any instructions issued by us;

has been subjected to abuse, misuse,



repaired or altered by persons other than us or our authorized representative;

resulting from tools or cleaning

• has been installed contrary to

has been painted or otherwise

local building codes;

• has been reconstructed,

products;

coated;

- hhas been used with any third-party products, hardware or product that has not been
- previously approved in writing by ■Refered to GIT Terms and conditions for the sales good.

CONTACT



