VAUDEVILLE COLLECTION

the bases for this custom order click lock laminate flooring. Create your own product by specifying features to suite your requirements.












GIT 1104







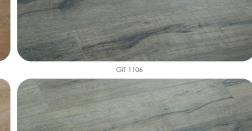

GIT 1107

GIT 1108



GIT 1109

INSTALLATION MANUAL













Spacer Kit

Rubber Mallet









Tapping Block

Pull Bar





Sliding T Bevel

It is the responsible of the installer to do the Final inspection of all the product before beginning the installation. The laminate should be inspected of color, finish, sheen, and shipping damages. Should any defects be present contact you dealer immediately. Once the laminate has been installed it is considered accepted.

GIT laminate is required to acclimate prior to installation. To acclimate store boxes, flat and level in the area to be covered.

ACCLIMATION

SUBFLOORS

INSTALLER


PREPARATION

Decide the direction of the GIT laminate planks. A recommendation would be to install parallel to the longest wall. Use a suitable compound to fill fix sub floor cracks Never glue GIT laminate planks

GIT laminate cannot be installed over existing flooring or carpet. Ensure that the sub flooring is clean, dry, level and structurally sound. Variations in floor should not exceed +- 2mm in 2m. GIT laminate flooring requires an underlay. It is underlay is required to insulate and act as a moisture barrier. Follow instruction on the underlay.

Remove threshold baseboards and existing flooring if required.


THE INSTALLATION

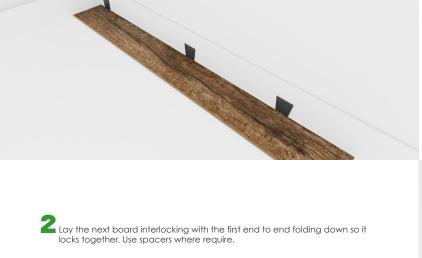


Place laminate plank so that the tongue is facing the wall 6mm or ¼ inch from the wall. Use spacers between the wall and the plank.





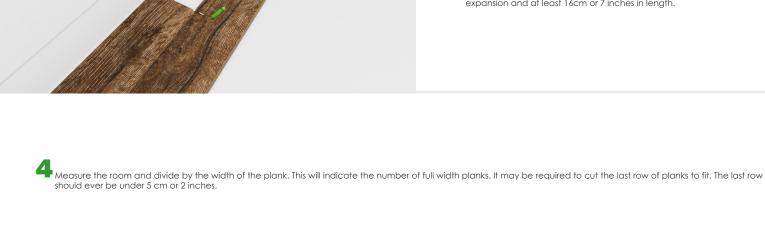

expansion and at least 16cm or 7 inches in length.

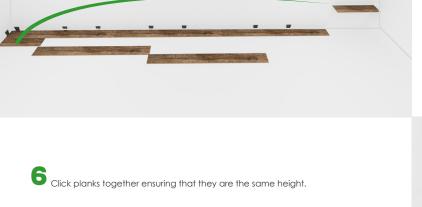

Use the end of the first row to start the second row provided it 30cm or 12 inches. If not cut a new plank to start the row ensuring that joints are 18cm




against the wall.

On the final row lay a plank upside down with the tongue touching the wall. Trace along the edge of the plank cut along this line the width of the plank. Insert the final piece

Pipes require a hole to be drilled 12mm or ½ inch larger than the diameter of the pipe. Cut off a piece and install around the pipe.


After the first three rows are installed use a chalk line to check that the rows

are straight.

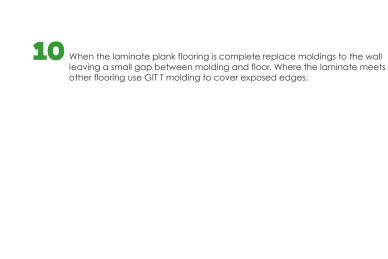

MAINTENANCE

Clean all spills as soon as they happen.

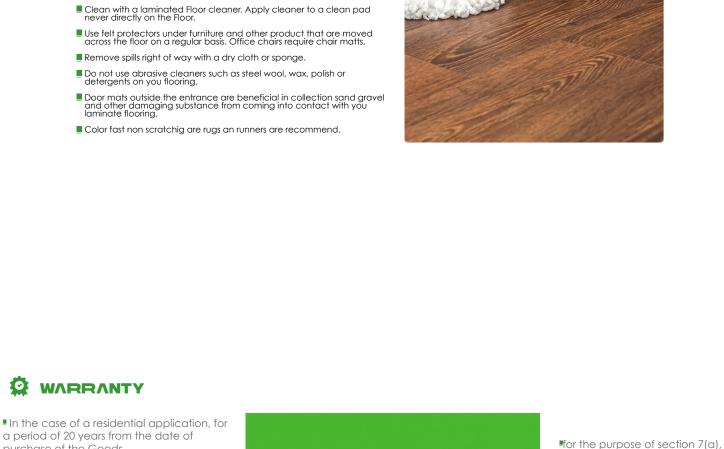

In the case of light commercial application, for a period of 5 years from the date of purchase of the PRODUCT WARRANTY LIMITATIONS: The Product Warranty does not apply to

to any instructions issued by us;

purchase of the Goods

any Good that: has been subjected to abuse, misuse, neglect, negligence, accident, improper testing, improper installation, improper storage, improper handling, abnormal physical stress, abnormal environmental conditions or maintenance or use contrary



coated; • has been reconstructed, repaired or altered by persons other than us or our authorized representative;

abuse includes surface damage

resulting from tools or cleaning

• has been installed contrary to

has been painted or otherwise

local building codes;

products;

- hhas been used with any third-party products, hardware or product that has not been
- previously approved in writing by ■Refered to GIT Terms and conditions for the sales good.

CONTACT



TEL **L** +1 877-371-8808 LOCATION © Unit 2, 290 Industrial Drive, Saint John, NB E2R 1A5

WEBSITE

SOCIAL MEDIA f in GITWHOLESALE HTTPS://GITWHOLESALE.CA http://nocobond.ca

